



LE5400 RS485/RS232

LE5400

RS485/RS232
AutoThink

ModbusRTU


ModbusRTU

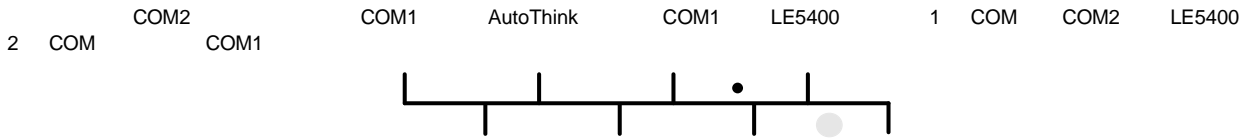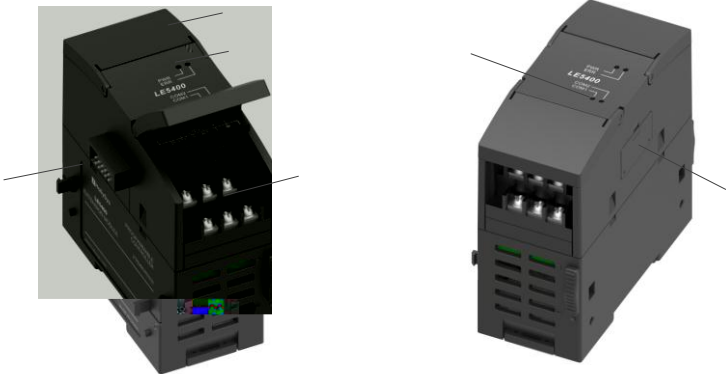

A_0/TxD_0	RS485 /RS232
B_0/RxD_0	RS485 /RS232
CGND	
RT	COM RS485 RT CGND
●	
⊖	
LE I/O	10 10 10 10

PWR			
ERR			
COM1/COM2			

2	RS485/RS232		
		+24VDC	0 mA
	Modbus /	5VDC	210mA
(bps)	9600 19200 38400() 57600 115200		
	I/Q/M		
	256		500VAC

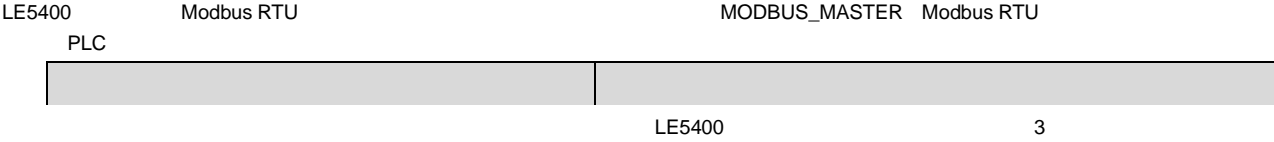

Wiring terminal	Pluggable	Storage relative humidity	5%~95%(non-condensing)
-----------------	-----------	---------------------------	------------------------

Software Configuration

LE5400 module can be used as master station or slave station of Modbus RTU, and it is default as a slave station. When as a master station, you need to configure function block "MODBUS_MASTER (Modbus RTU Master Communication)". See HollySys Programmable Logic Controller PLC Instruction Manual for details. As a slave station, you need to configure following serial communication parameters and slave address.

Slave configuration parametratioon M